



 


















Original	Sustituto
 Power	 Power
 Open/Close	 Eject / Surround
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 Info	 Info / Angle
 4	 4
 5	 5
 6	 6
 Clear	 +  Shift + Exit / Cancel / Clear
 7	 7
 8	 8
 9	 9
 Video	 +  Shift + 4
 0	 0
 Menu	 Menu / Home

Original	Sustituto
 Title	 Sound / Title
 Exit	 Exit / Cancel / Clear
 <<	 << / Tune-
 >>	 >> / Tune+
 Zoom	 Zoom / Size
 Left	 Left
 Up	 Up
 Right	 Right
 >>	 >>  / Preset+
 OK	 OK
 Down	 Down
  <<	  << / Preset-
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 ≡	 D.Menu / Top

