







 






Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 TXT	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Sustituto
 Exit	 Exit / Cancel / Clear
 ?	 D.Menu / Top
 @	 Smart / List
 Menu	 Menu / Home
 Up	 Up
 Back	 Back / Return
 Left	 Left
 OK	 OK
 Right	 Right
 Tools	 Setup / OPT /
 Down	 Down
 Guide	 Guide / EPG / -/--
 Vol+	 Vol+
 Source	 AV / Input / RDS
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer





Original	Sustituto
P-	CH- / Page-
I<	I<< / Preset-
>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Rec	Rec / Rec Mode
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
3D	Picture / Format
..0	Zoom / Size
[...].	Subtitle / EQ
Netflix	Shift + Red / Netflix /
My Media	Display / Media

Original	Sustituto

