


 
 
 






Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 TXT	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Sustituto
 Exit	 Exit / Cancel / Clear
 ?	 D.Menu / Top
 @	 Smart / List
 Menu	 Menu / Home
 Up	 Up
 Back	 Back / Return
 Left	 Left
 OK	 OK
 Right	 Right
 Tools	 Setup / OPT /
 Down	 Down
 Guide	 Guide / EPG / -/--
 Vol+	 Vol+
 Source	 AV / Input / RDS
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer





	Original	Sustituto	Original	Sustituto
	P-	CH- / Page-		
	<	<< / Preset-		
	>	>> / Preset+		
	<<	<< / Tune-		
	>>	>> / Tune+		
	Rec	Rec / Rec Mode		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	Stop	Stop / Hold		
	3D	Picture / Format		
	..0	Zoom / Size		
	[...].	Subtitle / EQ		
	Netflix	+ Shift + Red / Netflix /		
	My Media	Display / Media		

