





| Original | Sustituto |
|---|---|
|  |  Power |
|  |  Mute / Dimmer |
|  |  1 |
|  |  2 |
|  |  3 |
|  |  4 |
|  |  5 |
|  |  6 |
|  |  7 |
|  |  8 |
|  |  9 |
|  |  Back / Return |
|  |  0 |
|  |  Info / Angle |
|  |  Menu / Home |
|  |  Exit / Cancel / Clear |
|  |  Up |

| Original | Sustituto |
|---|---|
|  |  Left |
|  |  OK |
|  |  Right |
|  |  Shift + 0 |
|  |  Down |
|  |  Fav / Marker / PC |
|  |  TV / Radio / |
|  |  Guide / EPG / -/- |
|  |  Pause / Step / Freeze |
|  |  AV / Input / RDS |
|  |  Smart / List |
|  |  Audio / Lang I/II |
|  |  Red / Netflix / Search |
|  |  Green / APP / Repeat |
|  |  Yellow / YouTube / Repeat |
|  |  Text / Goto |
|  |  Blue / Prime Video / Random |





| Original | Sustituto | Original | Sustituto |
|-------------------------------|------------------------|----------|-----------|
| AUDIO R/L Blue / Audio R/L | TITLE SOUND / Title | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

