




 













 







 

 



 




 










 









 

 







 

 

 


 
 


 
 

 
 
 


 



Original	Sustituto
	 Power
	 Info
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Eject
	 Dual
	 Mute
	 Back
	 Pre Ch

Original	Sustituto
	 Up
	 Ch +
	 Down
	 Ch -
	 Right
	 Vol +
	 Left
	 Vol -
	 Ok
	 Menu
	 Exit
	 Blue
	 Pause
	 Red
	 Text
	 Smart
	 Yellow





Original	Sustituto	Original	Sustituto
 Power	 Power	 CH+	 Ch +
 Red	 Red	 CH-	 Ch -
 Green	 Green	 Up	 Up
 Yellow	 Yellow	 Down	 Down
 Blue	 Blue	 Right	 Right
 TV/SAT	 AV	 Left	 Left
 TV/Radio	 TV/R	 OK	 Ok
 Zoom	 Eject	 Vol+	 Vol +
 List	 List	 Vol-	 Vol -
 Audio	 Dual	 P+	 P+
 EPG	 Guide	 P-	 P-
 Timer	 Shift + AV	 Recall	 Pre Ch
 Text	 Text	 FAV	 Shift + Pre Ch
 Exit	 Exit	 1	 1
 Menu	 Menu	 2	 2
 M/P	 Media	 3	 3
 Mute	 Mute	 4	 4



