
 

 
 
 




 

 



 


 
 
 
 
 
 

 


 
 

 
 

 

 

 
 
 

 

 
 
 

 
 
 
 
 

 










 
 




 

 
 

 

 
 
 
 
 

 

 


 





| Original | Sustituto | Original | Sustituto |
|---|--------------|---|-------------|
|  | Standby - On |  | Power |
|  | TV / DVD |  | AV |
|  | Edit |  | TV/R |
|  | Select |  | Info |
|  | CH+ |  | Ch + |
|  | Up |  | Up |
|  | Down |  | Down |
|  | CH- |  | Ch - |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Menu Disc |  | D. Menu |
|  | Menu System |  | Menu |
|  | Timer |  | Sleep |
|  | T/C |  | Guide |
|  | Browser |  | Smart |
|  | Tuner |  | Subt |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Stop |  | Stop |
|  | Play |  | Play |
|  | Rec |  | Rec |
|  | Pause |  | Pause |
|  | Rec Mode |  | Shift + Rec |
|  | I<< |  | I<< |
|  | >>I |  | >>I |





| Original | Sustituto |
|--|--|
|  Standby - On |  Power |
|  TV / DVD |  TV/R |
|  Up |  Up |
|  CH+ |  Ch + |
|  CH- |  Ch - |
|  Down |  Down |
|  OK |  Ok |
|  Menu System |  Menu |
|  Timer |  Sleep |
|  T/C |  Guide |
|  Tuner |  Subt |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |

| Original | Sustituto |
|---|---|
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Rec |  Rec |
|  Return |  Back |
|  Red |  Red |
|  Green |  Green |
|  Yellow |  Yellow |
|  Blue |  Blue |
|  Tv Vol- |  Vol - |
|  Tv Vol+ |  Vol + |

