



Original	Sustituto
 Power	 Power
 Input	 AV / Input / RDS
 TV / TXT	 Shift + Text /
 Cancel	 Shift + Exit / Cancel / Clear
 Reveal	 Setup / OPT /
 Nicam/A2	 Shift + Sound / Title
 Hold	 Stop / Hold
 Size	 Shift + Zoom /
 Subpage	 Eject / Surround
 Index	 Smart / List
 Red / TV/Radio	 Red / Netflix / Search
 Red / TV/Radio	 TV/Radio /
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 CH+	 CH+ / Page+
 Vol+	 Vol+

Original	Sustituto
 CH-	 CH- / Page-
 Vol-	 Vol-
 Menu	 Menu / Home
 Mute	 Mute / Dimmer
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 DVB	 D.Menu / Top
 Exit	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Sustituto
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
-/--	SHIFT + GUIDE EPG Shift + Guide / EPG / -/--
0	HDMI - BAT 0
Recall	BACK Back / Return
PICTURE	FORMAT PICTURE Picture / Format
SOUND	TITLE SOUND Sound / Title
SLEEP	TIMER SLEEP Sleep / Timer
SUBTITLE	EQ SUBTITLE Subtitle / EQ
LANGUAGE	LANG I/II AUDIO Audio / Lang I/II
DISPLAY/INFO	MEDIA DISPLAY Display / Media
ZOOM	SIZE ZOOM Zoom / Size
TEXT	GOTO TEXT Text / Goto
EPG	-/-- GUIDE EPG Guide / EPG / -/--
FAV	PC FAV MARKER Fav / Marker / PC
FAV+	SHIFT + CH PAGE Shift + CH+ /

Original	Sustituto
FAV-	SHIFT + CH PAGE Shift + CH- /

