 
 

 
 
 



 



 

 
 

 

 
 


 





Original	Sustituto	Original	Sustituto
 POWER	 Power	 GUIDE	 Guide
 TV/Radio	 TV/R	 FAV	 Pre Ch
 EXIT	 Exit	 OK	 Ok
 MENU	 Menu	 UP	 Up
 AUDIO	 Dual	 DOWN	 Down
 MUTE	 Mute	 RIGHT	 Right
 TEXT	 Text	 LEFT	 Left
 1	 1	 VOL+	 Vol +
 2	 2	 VOL-	 Vol -
 3	 3	 CH+	 Ch +
 4	 4	 CH-	 Ch -
 5	 5	 SLEEP	 Sleep
 6	 6	 BACK	 Back
 7	 7	 RED	 Red
 8	 8	 GREEN	 Green
 9	 9	 YELLOW	 Yellow
 0	 0	 BLUE	 Blue





Original	Sustituto
	Shift + Ch +
	Shift + Ch -
	I<<
	>>I
	Stop
	Pause
	Rec
	<<
	Play
	>>
	Subt
	Format
	Info
	Options
	Media
	List
	AV

Original	Sustituto
	Smart

