
 
 






 


 
 



 
 

 
 
 



 
 
 
 

 


 





Original	Sustituto	Original	Sustituto
On/Off	 Power	Back	 Back
Mute	 Mute	Volume+	 Vol +
Info	 Info	Chan.Up	 Ch +
Subt.List	 Subt	Volume-	 Vol -
Sleep Timer	 Sleep	Menu audio	 Dual
Return TV	 TV/R	Chan.Down	 Ch -
Menu video	 D. Menu	1	 1
Text	 Text	2	 2
Txt Expand	 Eject	3	 3
TV/AV	 AV	4	 4
Menu	 Menu	5	 5
Menu Up	 Up	6	 6
Display	 Shift + Info	7	 7
Menu Left	 Left	8	 8
OK Enter	 Ok	9	 9
Menu Right	 Right	Guide -/-- 1.	 Guide
Menu Down	 Down	0/10	 0



Original	Sustituto	Original	Sustituto
Red	 A	Red	
Green	 B	Green	
Yellow	 C	Yellow	
Blue	 D	Blue	

