
 




 


 






 


 




 
 

 





Original	Sustituto	Original	Sustituto
 Power	 Power	 Back	 Back
 1	 1	 Text	 Text
 2	 2	 Menu	 Menu
 3	 3	 Guide	 Guide
 4	 4	 P+	 Ch +
 5	 5	 P-	 Ch -
 6	 6	 ↑	 Shift + Ch +
 7	 7	 ↓	 Shift + Ch -
 8	 8	 Up	 Up
 9	 9	 Left	 Left
 0 / □	 0	 OK	 Ok
 Exit / TV/Radio	 Exit	 Right	 Right
 Exit / TV/Radio	 TV/R	 Down	 Down
 Mute	 Mute	 Red	 Red
 Vol-	 Vol -	 Green / Option	 Green
 Vol+	 Vol +	 Green / Option	 Options
 i	 Info	 Yellow / Freeze	 Yellow



