


 









 



 



 





 

 





 


 










 
 



 
 








Original	Sustituto
 Power DVD	 Power
 Direct Tv Rec	 TV/R
 Drive Select HDD	 Media
 Drive Select DVD	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 * Cancel	 Guide
 Input Select	 AV
 CH+	 Ch +

Original	Sustituto
 CH-	 Ch -
 ShowView	 Blue
 Manual Skip	 Subt
 Skip	 I<<
 Skip	 >>I
 Slow/Search	 <<
 Slow/Search	 >>
 Stop	 Stop
 Pause	 Pause
 Play/x1.3	 Play
 Direct Navigator/Top	 Menu
 Functions	 Options
 Sub Menu	 D. Menu
 Return	 Back
 Up	 Up
 Down	 Down
 Right /	 Right





Original	Sustituto
Left /	Left
Enter	Ok
Prog/Check	Sleep
Display	Info
Status	3D
Time Slip	Format
Timer	Shift + AV
Erase	Exit
Rec Mode	Shift + Rec
Rec	Rec
(A) Ext Link	Red
(B) Dubbing	Green
(C) Create Chapter	Yellow
Audio	Dual
Power Tv	Shift + Power
AV Tv	Eject
CH+ Tv	Shift + Ch +

Original	Sustituto
CH- Tv	Shift + Ch -
Volume+ Tv	Vol +
Volume- Tv	Vol -

