





 







 

 

 





Original	Sustituto
Sleep	Sleep / Timer
Power	Power
VIDEO 1	Shift + 4
DVD/LD	Shift + 2
VIDEO 2	Shift + 9
TV / SAT	Shift + 1
VIDEO 3	Shift + Guide / EPG / -/-
TV / SAT	Shift + 0
AUX	Shift + 7
PHONO	Shift + 8
CD/SACD	Shift + 3
MD/TAPE	Shift + 5
TUNER	Shift + 6
1	1
2	2
3	3
4	4

Original	Sustituto
5	5
Enter 2	Shift + OK
6	6
7	7
8	8
9	9
>10	Guide / EPG / -/-
0	0
Enter	OK
D.Tuning	Smart / List
D.Skip/CH/Preset	CH+ / Page+
D.Skip/CH/Preset -	CH- / Page-
Display	Display / Media
A.F.D.	Red / Netflix / Search
2CH / Off	Green / APP / Repeat
MULTI CH / 2CH DIRECT	Info / Angle
Mode-	<< / Tune-





Original	Sustituto	Original	Sustituto
 Mode+	 >> / Tune+		
 Muting	 Mute / Dimmer		
 Test Tone	 Text / Goto		
 Main Menu	 Menu / Home		
 Master Vol+	 Vol+		
 Menu Left	 Left		
 Menu Right	 Right		
 +	 Blue / Prime Video / Random		
 Master Vol-	 Vol-		
 -	 Yellow / YouTube / Repeat		

