



Original	Sustituto
Display	Display / Media
Power	Power
Function-	Shift + Down
Function+	Shift + Up
Sound	Sound / Title
Menu	Menu / Home
Timer	Sleep / Timer
Up	Up
Folder-	CH- / Page-
OK	OK
Folder+	CH+ / Page+
Down	Down
Return	Back / Return
Clear	Exit / Cancel / Clear
I<</Preset-	I<< / Preset-
Play	Play / Slow
Pause	Pause / Step / Freeze

Original	Sustituto
>>I/Preset+	>>I / Preset+
<</Tuning-	<< / Tune-
Stop	Stop / Hold
>>/Tuning+	>> / Tune+
Vol+	Vol+
Vol-	Vol-

