
 















 


 
 
 
 


 
 
 

 
 

 



 







 
 
 


 
Original	Sustituto
 STB/DVR	 3
 Power Receiver	 Power
 Display	 Info
 BD / DVD	 1
 CBL / SAT	 2
 GAME	 4
 PC	 5
 AUX	 6
 TUNER	 AV
 TUNER	 7
 TV / CD	 8
 PHONO	 9
 USB	 0
 USB	 Media
 NET	 Guide
 Muting	 Mute
 Vol+	 Vol +

Original	Sustituto
 Vol-	 Vol -
 Home	 Smart
 CH+	 Ch +
 CH-	 Ch -
 SP Layout	 D. Menu
 Menu	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Setup	 Options
 Return	 Back
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 Play	 Play





Original	Sustituto
 >>	 >>
 Pause / Play Rev.	 Pause
 Stop	 Stop
 Movie / TV	 Red
 Music	 Green
 Game	 Yellow
 Thx	 Blue
 Dimmer	 Dual
 D.TUN	 TV/R
 Sleep	 Sleep
 1	 Shift + 1
 2	 Shift + 2
 3	 Shift + 3
 4	 Shift + 4
 5	 Shift + 5
 6	 Shift + 6
 7	 Shift + 7

Original	Sustituto
 8	 Shift + 8
 9	 Shift + 9
 0	 Shift + 0





Original	Sustituto	Original	Sustituto
Power Receiver	Power	Home	Smart
BD / DVD	1	CH+ / Album+	Ch +
STB / DVR	3	CH- / Album-	Ch -
CBL / SAT	2	Top Menu	D. Menu
GAME	4	Menu	Menu
PC	5	Up	Up
AUX	6	Page- / Playlist-	Left
TUNER	7	Enter	Ok
TUNER	AV	Page+ / Playlist+	Right
TV / CD	8	Down	Down
PHONO	9	Setup	Options
NET	Guide	Return	Back
USB	0	I<<	I<<
USB	Media	>>I	>>I
Muting	Mute	<<	<<
Vol+	Vol +	Play	Play
Vol-	Vol -	>>	>>



 






 







 
 

 

 



 

 
 
 


 

 
 


 
 
 



 



 
 






 
 













Original		Sustituto		Original		Sustituto	
	Pause / Play Rev.		Pause		9	+	Shift + 9
	Stop		Stop		0	+	Shift + 0
	Search		TV/R		--/--- +10	+	Shift + Guide
	Search		Red		Sleep		Sleep
	Repeat		Green		Display		Info
	Repeat		Text		CLR		Exit
	Random		Yellow				
	Mode		Blue				
	Mode	+	Shift + Play				
	1	+	Shift + 1				
	2	+	Shift + 2				
	3	+	Shift + 3				
	4	+	Shift + 4				
	5	+	Shift + 5				
	6	+	Shift + 6				
	7	+	Shift + 7				
	8	+	Shift + 8				





Original		Sustituto		Original		Sustituto	
	Power Receiver Zone 2		Power		<< Zone 2		<<
	Vol+ Zone 2		Vol +		Pause Zone 2		Pause
	Vol- Zone 2		Vol -		Stop Zone 2		Stop
	CH Disc/Album+ Zone 2		Ch +		Movie Tv/Search Zone 2		Red
	CH Disc/Album- Zone 2		Ch -		Music/Repeat		Green
	Up Zone 2		Up		Game/Random		Yellow
	Enter Zone 2		Ok		Stereo/Play Mode Zone 2		Blue
	Down Zone 2		Down		1 Zone 2		1
	Right Zone 2		Right		2 Zone 2		2
	Left Zone 2		Left		3 Zone 2		3
	Return Zone 2		Back		4 Zone 2		4
	Setup Zone 2		Smart		5 Zone 2		5
	Audio Zone 2		Media		6 Zone 2		6
	I<< Zone 2		I<<		7 Zone 2		7
	>>I Zone 2		>>I		8 Zone 2		8
	Play Zone 2		Play		9 Zone 2		9
	>> Zone 2		>>		0/11 Zone 2		0





Original	Sustituto	Original	Sustituto
 +10/--/--10/D.Tun/ Dimmer Zone 2	 Guide		
 CLR/Sleep/12	 Pre Ch		

