
 



 

 

 

 






 

 












 
 
 
 
 






 
 

 






 




 
 


 





Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 Eject/Open-Close	 Eject
 VCR	 Smart
 DVD	 Media
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 AV/Input	 AV
 >>	 >>

Original	Sustituto
 <<	 <<
 >>	 >>
 <<	 <<
 Stop	 Stop
 Play	 Play
 Pause/Step	 Pause
 Disc Menu/List	 Menu
 Home	 Shift + Smart
 Display	 Info
 Return	 Back
 Enter	 Ok
 Up	 Up
 PR/CH/TRK+	 Ch +
 PR/CH/TRK-	 Ch -
 Down	 Down
 Right	 Right
 Left	 Left





Original	Sustituto
 O))/Audio	 Dual
 [...] / Subtitle	 Subt
 Zoom	 Shift + Eject
 I.Skip	 3D
 Rec	 Rec
 TV/VCR	 TV/R
 CHP.ADD	 Text
 Title	 Options
 Rec Mode	 Shift + Rec
 Dubbing	 Mute
 Play Mode	 Shift + Play
 Marker	 Pre Ch
 Search	 Shift + TV/R
 Thumbnail	 List
 Power Tv	 Shift + Power
 AV/ Input Tv	 Shift + AV
 Vol+ Tv	 Vol +

Original	Sustituto
 Vol- Tv	 Vol -
 PR/CH+ Tv	 Shift + Ch +
 PR/CH- Tv	 Shift + Ch -

