



 




 
 

 





 


 


 


 
 
 









Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 Eject/Open-Close	 Eject
 VCR	 Smart
 DVD	 Media
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 AV/Input	 AV
 >>	 >>

Original	Sustituto
 <<	 <<
 >>	 >>
 <<	 <<
 Stop	 Stop
 Play	 Play
 Pause/Step	 Pause
 Disc Menu/List	 Menu
 Home	 Shift + Smart
 Display	 Info
 Return	 Back
 Enter	 Ok
 Up	 Up
 PR/CH/TRK-	 Ch +
 PR/CH/TRK-	 Ch -
 Down	 Down
 Right	 Right
 Left	 Left



[illegible]