



Original	Sustituto
Power	Power
SD	Smart
[+]	Info
Tv/AV	AV
Menu	Menu
Exit	Exit
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Tv/Text	Text
F.P.	Eject

Original	Sustituto
Index	List
Hold	Options
N	Media
CH+	Ch +
CH-	Ch -
Vol+	Vol +
Vol-	Vol -
Mute	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9



