



 


 

















 












Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute / Dimmer
	TV → HDD		TV/Radio /
	Doc		Picture / Format
	Disc		D.Menu / Top
	Input		AV / Input / RDS
	Input		Smart / List
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Up / CH+		CH+ / Page+
	Up / CH+		Up
	Pause		Pause / Step / Freeze
	Left / V-		Left
	Left / V-		Vol-
	OK / Play		Play / Slow
	OK / Play		OK
	Right / V+		Vol+
	Right / V+		Right
	I<		I<< / Preset-
	>I		>>I / Preset+
	Down / CH-		Down
	Down / CH-		CH- / Page-
	Rec		Rec / Rec Mode
	[i]		Info / Angle
	P / 1		Display / Media
	Menu		Menu / Home
	⊖		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Original	Sustituto
 7	 7
 8	 8
 9	 9
 Repeat	 Green / APP / Repeat
 0	 0
 Zoom	 Zoom / Size
 Language	 Audio / Lang I/II
 [...]	 Subtitle / EQ
 Angle	 Shift + Info / Angle

Original	Sustituto

