





 









 








 




 












Original	Sustituto
 Power	 Power
 Mute	 Mute
 Up / CH+	 Up
 Up / CH+	 Ch +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Down / CH-	 Ch -
 Down / CH-	 Down
 Enter	 Ok
 Menu	 Menu
 Red / P.M	 Red
 Red / P.M	 Format
 Green / S.M	 Green
 Green / S.M	 Shift + Dual
 Yellow / FAV	 Yellow

Original	Sustituto
 Yellow / FAV	 Pre Ch
 Blue / SLP	 Blue
 Zoom	 Eject
 Freeze	 Pause
 Blue / SLP	 Sleep
 DSP / CAPS	 Info
 Recall	 Back
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0



