
































































 






| Original | Sustituto | Original | Sustituto |
|--|--|---|---|
|  Standby |  Shift + Mute / Dimmer |  Info |  Info / Angle |
|  Mute |  Mute / Dimmer |  Left |  Left |
|  ATV |  Shift + AV / Input / RDS |  OK |  OK |
|  TV / Radio |  TV/Radio / |  Right |  Right |
|  TV Guide |  Guide / EPG / -/-- |  Menu |  Menu / Home |
|  USB |  Shift + 8 |  Down |  Down |
|  S. Mode |  Sound / Title |  Exit |  Exit / Cancel / Clear |
|  USB I<<< |  I<<< / Preset- |  1 |  1 |
|  USB >>> |  >>> / Preset+ |  2 |  2 |
|  USB Stop |  Stop / Hold |  3 |  3 |
|  P. Mode |  Picture / Format |  4 |  4 |
|  USB <<< |  <<< / Tune- |  5 |  5 |
|  USB >>> |  >>> / Tune+ |  6 |  6 |
|  USB Play/Pause |  Shift + Play / |  7 |  7 |
|  USB Play/Pause |  Play / Slow |  8 |  8 |
|  AV Source |  AV / Input / RDS |  9 |  9 |
|  Up |  Up |  0 |  0 |





| Original | Sustituto |
|----------|-----------------------------|
| | Back / Return |
| | Fav / Marker / PC |
| | Vol+ |
| | Subtitle / EQ |
| | Shift + Picture / Format |
| | CH+ / Page+ |
| | Vol- |
| | Audio / Lang I/II |
| | Sleep / Timer |
| | CH- / Page- |
| | Red / Netflix / Search |
| | Green / APP / Repeat |
| | Yellow / YouTube / Repeat |
| | Blue / Prime Video / Random |
| | Text / Goto |
| | Eject / Surround |
| | Shift + Back / Return |

| Original | Sustituto |
|----------|----------------|
| | Power |
| | Shift + Power |
| | Zoom / Size |
| | Shift + Stop / |
| | Shift + 3 |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

