








 






 
 





 

 

 




 


Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Red/Zoom	 Red
 Green/00	 Green
 Yellow	 Yellow
 Blue	 Blue
 Text	 Text

Original	Sustituto
 Picture	 Format
 AV	 AV
 Menu	 Menu
 PR+	 Ch +
 Up	 Up
 PR-	 Ch -
 Down	 Down
 Right	 Right
 Vol+	 Vol +
 Vol-	 Vol -
 Left	 Left
 Up VCR	 Shift + Ch -
 UP [≡]	 Shift + Text
 Up DVD	 Shift + Up
 Down VCR	 Shift + Ch +
 Down DVD	 Shift + Down
 << VCR	 Shift + <<



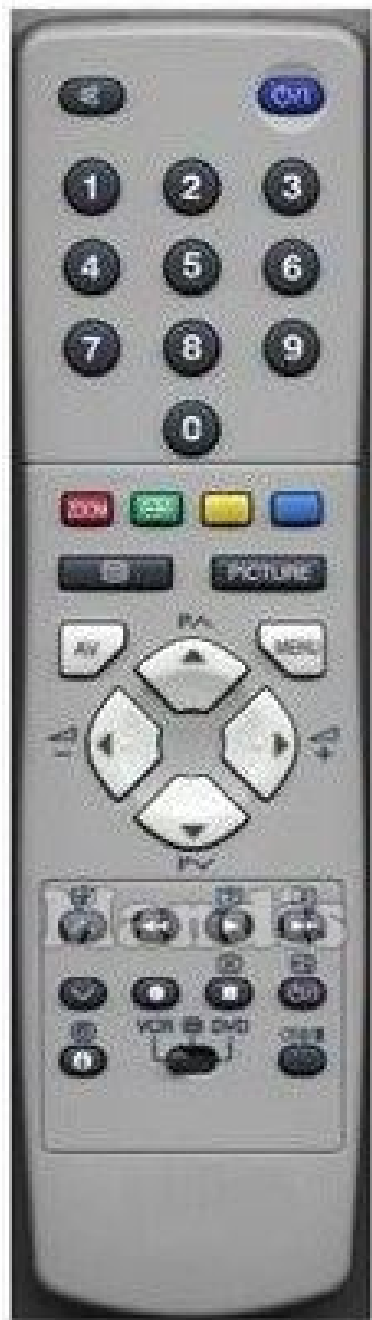

Original	Sustituto	Original	Sustituto
<< DVD	<<		
Play/[?] VCR	+ Shift + Play		
Play/[?] [=]	Eject		
Play/[?] DVD	Play		
>>/[+] VCR	+ Shift + >>		
>>/[+] [=]	+ Shift + Right		
>>/[+] DVD	>>		
Rec VCR	+ Shift + Rec		
Stop/[X] VCR	+ Shift + Stop		
Stop/[X] [=]	Exit		
Stop/[X] DVD	Stop		
Standby/[≡] VCR	+ Shift + Power		
Standby/[≡] [=]	Media		
Standby/[≡] DVD	Smart		
i/Timer	Info		
0)/ /	Dual		

