


Original	Sustituto
	Mute / Dimmer
	Power
	TV/Radio /
	Audio / Lang I/II
	Sound / Title
	Back / Return
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Guide / EPG / --

Original	Sustituto
	Smart / List
	Up
	CH+ / Page+
	Right
	Vol+
	Left
	Vol-
	OK
	Down
	CH- / Page-
	Red / Netflix / Search
	Green / APP / Repeat
	Shift + Audio / Lang I/II
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Display / Media
	Stop / Hold

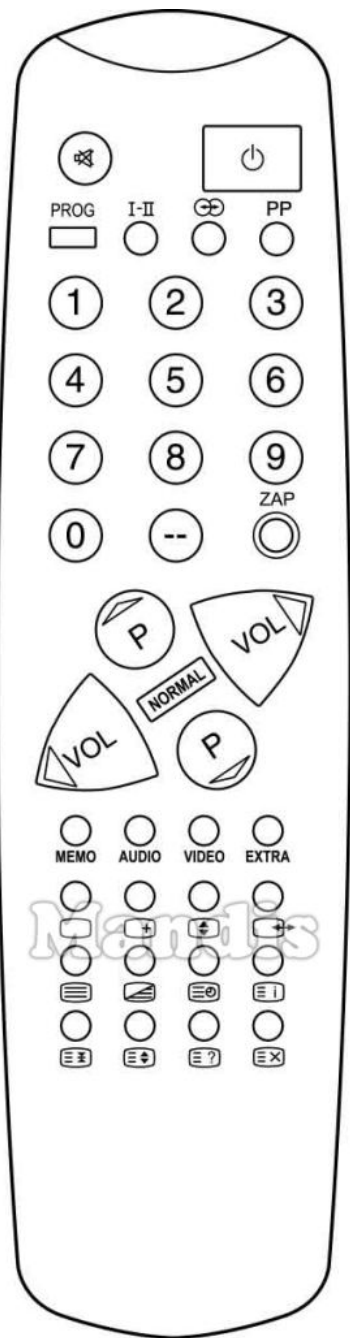



Original	Sustituto	Original	Sustituto
[ ◆ ]	OPT-TOOLS <b>SETUP</b> Setup / OPT /		
[ ]↔	TOP MENU <b>D.MENU</b> D.Menu / Top		
[ ≡ ]	<b>GOTO</b> <b>TEXT</b> Text / Goto		
[ /≡ ]	<b>SHIFT</b> + <b>GOTO</b> Shift + <b>TEXT</b> Text /		
[ ≡⊖ ]	<b>EQ</b> <b>SUBTITLE</b> Subtitle / EQ		
[ ≡ i ]	<b>ANGLE</b> <b>INFO</b> Info / Angle		
[ ≡□ ]	<b>STEP-FREEZE</b> <b>  </b> Pause / Step / Freeze		
[ ≡◆ ]	<b>SIZE</b> <b>ZOOM</b> Zoom / Size		
[ ≡? ]	<b>RDS</b> <b>AV INPUT</b> AV / Input / RDS		
[ ≡X ]	<b>CLEAR</b> <b>EXIT</b> Exit / Cancel / Clear <b>CANCEL</b>		

Original	Sustituto

