









	Original	Sustituto
	Tv/Video	 TV/Radio /
	Power	 Power
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	-/--	 Guide / EPG / -/--
	10/0	 0
	Enter	 OK
	Vol+	 Vol+
	Vol-	 Vol-
	CH-	 CH- / Page-

	Original	Sustituto
	CH+	 CH+ / Page+






Original	Sustituto
Sleep	Sleep / Timer
Timer Menu	Shift + Sleep / Timer
Theatre Sync	Red / Netflix / Search
Power	Power
Display	Display / Media
Time/Text	Text / Goto
Dimmer	Mute / Dimmer
Function+	CH+ / Page+
Key Control b	Smart / List
Key Control #	Shift + Smart / List
Score	Setup / OPT /
Function-	CH- / Page-
Karaoke Mode	Sound / Title
Karaoke Pon	Yellow / YouTube / Repeat
Repeat/FM	Green / APP / Repeat
Picture Navi	Picture / Format
1	1





Original	Sustituto
2	2
3	3
Audio	Audio / Lang I/II
4	4
5	5
6	6
Subtitle	Subtitle / EQ
7	7
8	8
9	9
Angle	Info / Angle
Clear	Exit / Cancel / Clear
0	0
Folder-	Shift + CH- /
Folder+	Shift + CH+ /
DVD Top Menu	D.Menu / Top
DVD/USB/Tuner	Menu / Home







Original	Sustituto
 EQ	 Shift + Subtitle / EQ
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Volume+	 Vol+
 Down	 Down
 Display/[ *]	 Shift + Display / Media
 Volume-	 Vol-
 Return	 Back / Return
 I<</Preset-	 I<< / Preset-
 ←/Replay/<I Step	 Shift + Left
 →/Advance/Step II>	 Shift + Right
 >>I/Preset+	 >>I / Preset+
 <</Tuning -/<I	 << / Tune-
 Play	 Play / Slow
 >>/Tuning	 >> / Tune+

Original	Sustituto
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold



+/Slow I>