 













 

 

















 







Original	Sustituto	Original	Sustituto
 Standby	 Power	 >>I/Subpage	 >>I / Preset+
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 Red	 Red / Netflix / Search	 Up	 Up
 Green	 Green / APP / Repeat	 Exit	 Exit / Cancel / Clear
 Yellow	 Yellow / YouTube / Repeat	 Left	 Left
 Blue	 Blue / Prime Video / Random	 Enter	 OK
 e	 Info / Angle	 Right	 Right
 Mouse	 Smart / List	 Play/Pause / Timeshift	 Pause / Step / Freeze
 Home	 Shift + Menu /	 Play/Pause / Timeshift	 Play / Slow
 TXT	 Text / Goto	 Down	 Down
 Mix/FAV.List	 Fav / Marker / PC	 Stop / EPG	 Stop / Hold
 Size/Subtitle	 Subtitle / EQ	 Vol+	 Vol+
 Cancel/Audio	 Audio / Lang I/II	 Mute	 Mute / Dimmer
 Record	 Rec / Rec Mode	 CH+ / Page+	 CH+ / Page+
 <</Index	 << / Tune-	 Vol-	 Vol-
 >>/Hold	 >> / Tune+	 Tv/Radio	 TV/Radio /
 I<</Reveal	 I<< / Preset-	 CH-	 CH- / Page-





Original	Sustituto	Original	Sustituto
1	1	TV	1
2	2	DVD	2
3	3	CD - STB	3
4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
DISPLAY	[ *]/Display	MEDIA DISPLAY	Display / Media
0	0	HDMI - BAT	0
RECALL	Recall	RETURN BACK	Back / Return

