

 
 
 
 
 

 
 

 
 

 
 
 
 
 


 

 


 
 
 




Original	Sustituto
 Power	 Power
 Mute	 Mute
 Source	 AV
 Radio / Angle	 TV/R
 List/USB	 List
 EPG/+10	 Guide
 Still	 Pause
 Aspect	 Format
 OO/I/II Audio	 Dual
 FAV+/Prog	 Smart
 FAV-/Repeat	 Media
 Info	 Info
 Sleep	 Sleep
 PIC	 Shift + Format
 Sound	 Shift + Dual
 Menu	 Menu
 Exit	 Exit

Original	Sustituto
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 CH-	 Ch -
 CH+	 Ch +
 Vol-	 Vol -
 Vol+	 Vol +
 Recall	 Back
 Text/Left	 Text
 Text/Left	 Left
 Mix/Right	 Shift + Text
 Mix/Right	 Right
 Subtitles	 Subt
 Index / Play	 Play
 Hold/Left	 Left





Original	Sustituto
Size/>>I	>>I
Cancel/Stop	Stop
Recall/Reveal/Open/Close/Rec	Rec
Recall/Reveal/Open/Close/Rec	Eject
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Page-	Shift + Ch -
Page+	Shift + Ch +
Red/Goto	Red

Original	Sustituto
Green/Title	Green
Yellow/Setup	Yellow
Yellow/Setup	Options
Blue/D.Menu	Blue
Blue/D.Menu	D. Menu

