
 





Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	TXT		Text / Goto
	Vol+		Vol+
	Source		AV / Input / RDS
	P+		CH+ / Page+
	Vol-		Vol-
	Home		Menu / Home
	P-		CH- / Page-
	*		Smart / List
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	prime video		Shift + Blue / Prime
	USB		Shift + 8
	Red		Red / Netflix / Search





	Original	Sustituto	Original	Sustituto
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	<<	<< / Tune-		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	>>	>> / Tune+		
	Rec	Rec / Rec Mode		
	Stop	Stop / Hold		
	Audio	Audio / Lang I/II		

