



Original	Sustituto	Original	Sustituto
Power On	Power	Vol-	Vol -
Power Off	Shift + Power	Mute	Mute
1	1	FRQ Direct	Play
2	2	Tune	I<<
3	3	Preset	>>I
4	4	FM Mono	Pause
5	5	Band	Stop
6	6	Center	Yellow
7	7	Swoofers	Red
8	8	Surround	Green
9	9	Menu	Menu
0	0	Up	Up
Ten/+10	Guide	Down	Down
Memory	Pre Ch	+/Forward	Right
CH+	Ch +	-/Back	Left
CH-	Ch -	Enter	Ok
Vol+	Vol +	CD	Shift + 1





 
 












 




















 
 

 






 

 
 
 


Original	Sustituto
TUN Tun	SHIFT + 2 Shift + 2
TAPE Tape	SHIFT + 3 Shift + 3
EXT EXT	SHIFT + 4 Shift + 4
V1 V1/DVD	SHIFT + 5 Shift + 5
V2 V2	SHIFT + 6 Shift + 6
V3 V3	SHIFT + 7 Shift + 7
V4 V4	SHIFT + 8 Shift + 8
V5 V5	SHIFT + 9 Shift + 9
DISC1 EQ EQ	HOME SMART Smart
DISC2 DYN DYN	APP MEDIA Media
DISC3 REC Rec	REC MODE Rec
DISC4 ZONE Zone	SHIFT + HOME SMART Shift + Smart
DISC5 SUR+ Sur+	SHIFT + APP MEDIA Shift + Media
PROG 2CH 2 CH	DISC NAV LIST List
RANDOM PL C DIGEST PL C	SETTINGS OPT Options
REPEAT PL M TITLE PL M	ECO 3D 3D
DISC-5CH P-SCAN 5 CH	SOUND DUAL Dual

Original	Sustituto
DISC+ 7CH OPEN 7 CH	AD SUBT Subt
DISPLAY DISP Display	DISPLAY INFO Info
AUDIO TAPE2 Tape 2	CLEAR EXIT Exit
ANGLE PHONO Phono	RETURN BACK Back
SBTITLE TONE Tone	REPEAT TEXT Text
ZOOM D-SLT D-SLT	E-MANUAL D.MENU D. Menu
RESUME SCAN INPUT 1 Scan	SHIFT + PLAY MODE Shift + Play
REPEAT PTY INPUT 2 PTY	<< <<
A - B P-TUN INPUT 3 P-Tun	>> >>
GOTO TP TVVCR TP	SHIFT + PAUSE Shift + Pause
SLOW TA RECORD TA	SHIFT + STOP Shift + Stop
ASPECT Aspect	PICTURE FORMAT Format
DISP Disp	SHIFT + DISPLAY INFO Shift + Info
PIP PIP	PROG SLEEP Sleep
POP POP	SEARCH TV/R TV/R
OUTPUT Output	TIMER AV AV
POWER Power	D Blue





 














 

 





 










 



 



 


 




 
 


 
 

 

 
 
 

 




	Original	Sustituto	Original	Sustituto
	Power On			Play
	Power Off			I<<
	1			>>I
	2			Pause
	3			Stop
	4			Menu
	5			Up
	6			OSD
	7			Down
	8			-/Back
	9			-/Back
	0			+ /Forward
	Ten (+10)			+ /Forward
	Clear (X)			Enter
	Vol+			Search-
	Vol-			Search+
	Mute			Random (DYN)
				TV/R





Original		Sustituto		Original		Sustituto	
	Power On		Power		I<<		I<<
	Power Off		Shift + Power		>>I		>>I
	1		1		Pause		Pause
	2		2		Stop		Stop
	3		3		Open (ENT)		Ok
	4		4		Open (ENT)		Eject
	5		5		Search-		Ch -
	6		6		Search+		Ch +
	7		7		Disc 1		Shift + 1
	8		8		Disc 2		Shift + 2
	9		9		Disc 3		Shift + 3
	0		0		Disc 4		Shift + 4
	TEN (+10)		Guide		Disc 5		Shift + 5
	Vol+		Vol +		Program (2CH)		Sleep
	Vol-		Vol -		Random (PL C)		TV/R
	Mute		Mute		Repeat (PL M)		Text
	Play		Play		Disc+ (7CH)		>>



