














 

 

 





 




 









Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV/Radio	 TV/R
 ←PR	 Back
 FAV	 Pre Ch
 Menu	 Menu
 SAT	 Smart

Original	Sustituto
 Info	 Info
 Page Up	 >>I
 Page Down	 I<<
 Up / PR+	 Up
 Up / PR+	 Ch +
 Down / PR-	 Down
 Down / PR-	 Ch -
 Right / Vol+ / W	 Right
 Left / Vol- / E	 Left
 Right / Vol+ / W	 Vol +
 Left / Vol- / E	 Vol -
 OK / List	 Ok
 OK / List	 List
 Exit	 Exit
 EPG	 Guide
 TV/AV	 AV
 Pause	 Shift + Pause





Original	Sustituto	Original	Sustituto
 PAL/NTSC	 Format		
 UHF	 Media		
 Red / Audio	 Red		
 Red / Audio	 Dual		
 Green / Position	 Green		
 Yellow / Subtitle	 Yellow		
 Yellow / Subtitle	 Subt		
 Blue / L/R	 Blue		
 REW	 <<		
 Play / Slow	 Play		
 Stop	 Stop		
 F.F	 >>		
 Pause (For PVR)	 Pause		
 Rec	 Rec		

