

 























Original	Sustituto
Standby	Power
Open/Close	Eject / Surround
Audio	Audio / Lang I/II
1	1
2	2
3	3
Angle	Info / Angle
4	4
5	5
6	6
Subtitle	Subtitle / EQ
7	7
8	8
9	9
Search	Red / Netflix / Search
PRG	TV/Radio /
CLR	Exit / Cancel / Clear

Original	Sustituto
0	0
Title	Sound / Title
Up	Up
Menu	Menu / Home
Left	Left
OK	OK
Right	Right
Display	Display / Media
Down	Down
Video Out	AV / Input / RDS
Return	Back / Return
Setup	Setup / OPT /
Mode	D.Menu / Top
Vol+	Vol+
Mute	Mute / Dimmer
Mark	Fav / Marker / PC
Zoom	Zoom / Size





Original		Sustituto		Original	Sustituto
	Vol-		Vol-		
	A-B		Yellow / YouTube / Repeat		
	SlowR		CH- / Page-		
	SlowF		CH+ / Page+		
	<<		<< / Tune-		
	>>		>> / Tune+		
	<<		<< / Preset-		
	>>		>> / Preset+		
	Stop		Stop / Hold		
	Pause/Step		Pause / Step / Freeze		
	Play		Play / Slow		

