























 







 



























| Original | Sustituto |
|--|--|
|  Power |  Power |
|  Aspect |  Picture / Format |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  List |  Smart / List |
|  0 |  0 |
|  Repeat |  Green / APP / Repeat |
|  Vol+ |  Vol+ |
|  S |  Subtitle / EQ |

| Original | Sustituto |
|--|---|
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Audio |  Audio / Lang I/II |
|  CH- |  CH- / Page- |
|  i |  Info / Angle |
|  Guide |  Guide / EPG / -/- |
|  Rec |  Rec / Rec Mode |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Input |  AV / Input / RDS |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Back |  Back / Return |
|  Down |  Down |
|  Exit / DVD Setup |  Exit / Cancel / Clear |
|  Exit / DVD Setup |  Shift + Exit / Cancel / Clear |





| Original | Sustituto |
|-------------------|--------------------------------|
| Red / Prog | Red / Netflix / Search |
| Red / Prog | Shift + Red / Netflix / Search |
| Green / Step | Shift + Green / APP / Repeat |
| Yellow / Goto | Yellow / YouTube / Repeat |
| Blue / A-B | Blue / Prime Video / Random |
| Index / Stop | Pause / Step / Freeze |
| Hold / Play/Pause | Shift + Stop / |
| Hold / Play/Pause | Stop / Hold |
| Reveal / << | << / Tune- |
| Size / >> | >> / Tune+ |
| FAV / Menu | Fav / Marker / PC |
| FAV / Menu | Shift + Fav / Marker / PC |
| TV.RD / Angle | TV/Radio / |
| Mix / I<< | I<< / Preset- |
| S.Page / >>I | Shift + >>I / Preset+ |
| S.Page / >>I | >>I / Preset+ |
| Title | Sound / Title |

| Original | Sustituto |
|-------------|--------------------------|
| Slow | Play / Slow |
| Text / Zoom | Shift + Text / |
| Text / Zoom | Text / Goto |
| Cancel / | Shift + Eject / Surround |
| Cancel / | Eject / Surround |

