















 



 



 













Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Lang		Audio / Lang I/II
	[≡]..		Subtitle / EQ
	Text		Text / Goto
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK





Original		Sustituto		Original		Sustituto	
	9		9				
	Guide		Guide / EPG / -/--				
	0		0				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Home		Shift + Menu /				
	Netflix		Shift + Red / Netflix /				
	YouTube		Shift + Yellow / YouTube /				

