












 





 








 


 






Original	Sustituto
Power	Power
AUX	<b>1</b> 1
AUX	<b>A</b> Red
TUNER / BAND	<b>2</b> 2
TUNER / BAND	<b>SHIFT</b> + <b>SEARCH TV/R</b> Shift + TV/R
TUNER / BAND	<b>B</b> Green
DVD / CD	<b>3</b> 3
DVD / CD	<b>D</b> Blue
TV	<b>C</b> Yellow
TV	<b>4</b> 4
TV	<b>SEARCH TV/R</b> TV/R
VCR	<b>5</b> 5
Volume+	<b>+</b> VOL Vol +
Volume-	<b>-</b> VOL Vol -
Muting	<b>MUTE</b> Mute
Subwoofer	<b>SOUND DUAL</b> Dual
Dd Prologic	<b>SETTINGS OPT</b> Options

Original	Sustituto
Super SRND	<b>AD SUBT</b> Subt
Simulated ST.	<b>APP MEDIA</b> Media
SFC	<b>DISC NAV LIST</b> List
Mix 2ch	<b>HOME SMART</b> Smart
Test	<b>REPEAT TEXT</b> Text
CH Select	<b>OK</b> Ok
CH+	<b>+</b> CH Ch +
CH-	<b>-</b> CH Ch -





Original	Sustituto
 Power	 Power
 AUX	 Shift + 1
 AUX	 Red
 TUNER / BAND	 Shift + 2
 TUNER / BAND	 Shift + TV/R
 TUNER / BAND	 Green
 DVD / CD	 Shift + 3
 DVD / CD	 Blue
 TV	 Yellow
 TV	 Shift + 4
 TV	 TV/R
 VCR	 Shift + 5
 Volume+	 Vol +
 Volume-	 Vol -
 Muting	 Mute
 1 / Disc 1	 1
 2 / Disc 2	 2

Original	Sustituto
 3 / Disc 3	 3
 4 / Disc 4	 4
 5 / Disc 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ≥10 / -/-	 Guide
 Disc	 Pre Ch
 Pause	 Pause
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Play	 Play
 I<< Skip	 I<<
 Stop	 Stop
 Skip >>I	 >>I





 

 




 











 



 


 
 


Original	Sustituto
Disc Manager	D. Menu
Play Mode	Shift + Play
Clear	Exit
Repeat	Text
A-B Repeat	Shift + Text
Title	Smart
Marker	Media
Return	Back
Display	Info
Up / On	Up
Down / Off	Down
Left	Left
Right	Right
Select	Ok
Menu	Menu
Set Up	Options
Sub Title	Subt

Original	Sustituto
Audio	Dual
Angle	Format
FL Display	Shift + Info
Timer	AV






 
Original	Sustituto	Original	Sustituto
	Power		Power
	TV/AV		AV
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10 / -/--		Guide

Original	Sustituto





Original		Sustituto	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10 / -/--		Guide
	CH+		Ch +
	CH-		Ch -
	Stop		Stop
	<<		<<
	>>		>>

Original		Sustituto	
	Play		Play

