




Original	Sustituto
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/-
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH + / Page+

Original	Sustituto
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Eco	 D.Menu / Top
 Info	 Info / Angle
 Up	 Up
 Option	 Shift + Setup / OPT / Tools
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Setup	 Setup / OPT /
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze





Original	Sustituto
	Play / Slow
	Tune- / Preset-
	Shift + Tune- / << /
	Tune+ / Preset+
	Shift + Tune+ / >> /
	Tune- / Tune-
	Tune+ / Tune+
	Shift + Red / Netflix / Search
	Shift + Green / APP / Repeat
	Shift + Yellow / YouTube / Repeat A-B
	Shift + Blue / Prime Video / Random
	Green / APP / Repeat
	Red / Netflix / Search
	Blue / Prime Video / Random
	Yellow / YouTube / Repeat
	TV 1
	DVD 2

Original	Sustituto
	3
	4
	5
	6
	7
	8
	9
	0
	OK





Original	Sustituto
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/-
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH+ / Page+

Original	Sustituto
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+





Original	Sustituto
TUNE+ >> Tune+	SHIFT + TUNE+ Shift+ >> /
<< <<	TUNE- << / Tune-
>> >>	TUNE+ >> / Tune+
[1] Smart Select 1	NETFLIX Red / Netflix / Search
[2] Smart Select 2	APP Green / APP / Repeat
[3] Smart Select 3	YouTube Yellow / YouTube / Repeat
[4] Smart Select 4	Prime Video Blue / Prime Video / Random
[1] 1	TV 1
[2] 2	DVD 2
[3] 3	CD - STB 3
[4] 4	VIDEO 4
[5] 5	TAPE 5
[6] 6	TUNER 6
[7] 7	AUX - HDD 7
[8] 8	USB 8
[9] 9	BLUETOOTH 9
[0] 0	HDMI - BAT 0

Original	Sustituto
ENTER Enter	OK OK





Original	Sustituto
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/-
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH + / Page+

Original	Sustituto
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+





	Original	Sustituto	
	>>/Tune+	+  Shift + >> /	
	<<	<< / Tune-	
	>>	>> / Tune+	
	Smart Select 1	Red / Netflix / Search	
	Smart Select 2	Green / APP / Repeat	
	Smart Select 3	Yellow / YouTube / Repeat	
	Smart Select 4	Blue / Prime Video / Random	
	1	1	1
	2	2	2
	3	3	3
	4	4	4
	5	5	5
	6	6	6
	7	7	7
	8	8	8
	9	9	9
	0	0	0

	Original	Sustituto
	Enter	OK

