






Original	Sustituto
 Power	 Power
 TV/VCR - DVD	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Mute	 Mute
 I-II Audio	 Dual
 TV/Text	 Text
 Input	 AV

Original	Sustituto
 Vol+	 Vol +
 Vol-	 Vol -
 P/TRK+	 Ch +
 P/TRK-	 Ch -
 Slow+	 Shift + Ch +
 Slow-	 Shift + Ch -
 << / Index	 <<
 S.Mode	 Shift + Dual
 P.Mode	 Format
 >> / Mix	 >>
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop
 Play / Pause	 Play
 Play / Pause	 Pause
 Red / Menu	 Red
 Red / Menu	 Menu



