

 


 



 
 






 

 
 


 

 

 

 




 


Original	Sustituto
 Standby DVD	 Power
 Standby	 Shift + Power
 Tv AV/Video	 TV/R
 TV Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AUX	 0
 Cancel	 Exit
 Memo/Mark	 Pre Ch
 Tv Vol+	 Vol +

Original	Sustituto
 Tv Vol-	 Vol -
 PR+	 Ch +
 PR-	 Ch -
 ShowView/Video	 Smart
 Prog/Check	 Sleep
 SAT Timer	 Media
 Timer	 AV
 Top Menu	 Shift + Menu
 Navigation	 List
 Menu	 Menu
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 I<<	 I<<



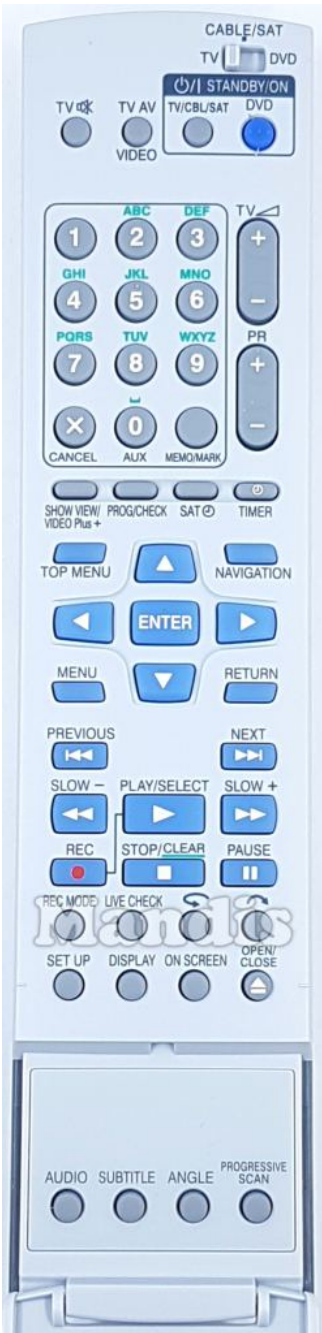

Original	Sustituto
>>I	>>I
<</Slow-	<<
Play/Select	Play
>>/Slow+	>>
Rec	Rec
Stop/Clear	Stop
Pause	Pause
Rec Mode	SHIFT + REC MODE Shift + Rec
Live Check	REPEAT TEXT Text
←	C Yellow
→	D Blue
Set Up	SETTINGS OPT Options
On Screen	ECO 3D 3D
Display	DISPLAY INFO Info
Open/Close	ZOOM Eject
Audio	SOUND DUAL Dual
Subtitle	AD SUBT Subt

Original	Sustituto
Angle	E-MANUAL D.MENU D. Menu
Progressive Scan	PICTURE FORMAT Format

 




Original	Sustituto
Standby	Power
Standby DVD	+ Shift + Power
Mute	Mute
Tv/AV/Video	TV/R
Vol+	Vol +
Vol-	Vol -
PR+	Ch +
PR-	Ch -
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

Original	Sustituto
0	0
Cancel	Back
Timer	AV
Show View/Video Plus	Smart



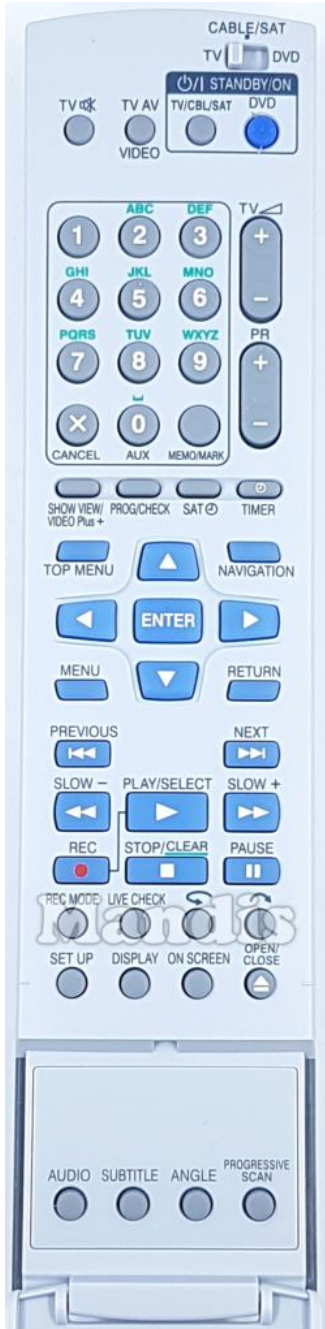

Original	Sustituto
Standby	Power
Standby DVD	+ Shift + Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
PR+	Ch +
PR-	Ch -
Tv Vol+	Vol +
Tv Vol-	Vol -
Tv Mute	Mute

Original	Sustituto

