



 





















Original	Sustituto
 Power	 Power
 Audio	 Audio / Lang I/II
 VHS/DVD	 Smart / List
 1	 1
 2	 2
 3	 3
 CH+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 CH-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Cancel / Reset	 Exit / Cancel / Clear
 0	 0
 -/-- / >=10	 Guide / EPG / -/--

Original	Sustituto
 Repeat	 Green / APP / Repeat
 I<< Skip	 I<< / Preset-
 Skip >>I	 >>I / Preset+
 REW / << Slow/Search	 << / Tune-
 FF / Slow/Search	 >> / Tune+
 Stop	 Stop / Hold
 Pause / Slow	 Pause / Step / Freeze
 Play	 Play / Slow
 Direct Navigator / Top Menu	 D.Menu / Top
 Up	 Up
 Play List / Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Display	 Display / Media
 Down	 Down
 Exit / Return	 Back / Return





Original	Sustituto
	 AV / Input / RDS
	 Fav / Marker / PC
	 Eject / Surround
	 Setup / OPT /
	 Sleep / Timer
	 Sound / Title
	 Rec / Rec Mode
	 Vol-
	 Zoom / Size
	 Picture / Format
	 Subtitle / EQ

Original	Sustituto





Original	Sustituto
VHS/DVD Power	Power
Audio	Audio / Lang I/II
VHS/DVD	Smart / List
1	1
2	2
3	3
CH+ / Tracking/V-Lock+	CH+ / Page+
4	4
5	5
6	6
CH- / Tracking/V-Lock-	CH- / Page-
7	7
8	8
9	9
Input	AV / Input / RDS
Cancel / Reset	Exit / Cancel / Clear
0	0

Original	Sustituto
-/-- / >=10	Guide / EPG / -/--
ShowView	D.Menu / Top
I<< Index	I<< / Preset-
Index >>I	>>I / Preset+
REW	<< / Tune-
FF	>> / Tune+
Stop	Stop / Hold
Pause / Slow	Pause / Step / Freeze
Play	Play / Slow
Prog Play	Text / Goto
Up	Up
Menu	Menu / Home
Left	Left
Enter	OK
Right	Right
Display	Display / Media
Down	Down













Original	Sustituto	Original	Sustituto
	Exit / Return		Back / Return
	Prog/Check		Shift + TV/Radio / Program
	I-Timer		Shift + Sleep / Timer
	Off Timer		Subtitle / EQ
	Rec Mode		Shift + Rec / Rec Mode
	Timer		Sleep / Timer
	Music with Picture		Sound / Title
	Rec. Check		TV/Radio /
	Rec		Rec / Rec Mode
	Jet Rew		Shift + << /
	A / Ext Link		Red / Netflix / Search
	B / AV Link		Shift + AV / Input / RDS
	Dubbing		Eject / Surround





	Original	Sustituto	Original	Sustituto
	Power			
	AV			
	Volume+			
	Volume-			
	CH+			
	CH-	