



Original	Sustituto
Power Receiver	Power
BD	1
DVD	2
DVR / BDR	5
HDMI	0
TV	TV/Radio /
CD	3
NET	7
ADAPTER	Eject / Surround
iPod USB	8
Tuner	6
Video	4
CD-R	9
Input Select	Shift + Left
Input Select ~	Shift + Right
Master Volume	Vol+
Master Volume	Vol-

Original	Sustituto
Mute	Mute / Dimmer
Top Menu	D.Menu / Top
Band	Subtitle / EQ
Audio	Audio / Lang I/II
Tune+	Shift + >> /
Up	Up
Tools	Setup / OPT /
T.Edit	Text / Goto
Video	Picture / Format
Left	Left
Preset -	Shift + I<< / Preset-
Enter	OK
Preset +	Shift + >>I / Preset+
Right	Right
iPod CTRL	Smart / List
Home Menu	Menu / Home
Tune-	Shift + << /





Original	Sustituto	Original	Sustituto
 Down	 Down	 Stop	 Stop / Hold
 Return	 Back / Return	 >>I	 >>I / Preset+
 Auto / Alc / Direct	 Info / Angle	 1 Tuner	 Shift + 1
 Stereo	 Sound / Title	 2 Tuner	 Shift + 2
 Repeat	 Green / APP / Repeat	 3 Tuner	 Shift + 3
 Standard	 Shift + Smart / List	 Audio DVD	 Shift + Audio / Lang I/II
 Random	 Blue / Prime Video / Random	 4 Tuner	 Shift + 4
 Adv. Surr.	 Guide / EPG / -/-	 Signal Sel	 Shift + Setup / OPT / Tools
 <<	 << / Tune-	 MCACC	 Fav / Marker / PC
 Phase CTRL	 Red / Netflix / Search	 5 Tuner	 Shift + 5
 Play	 Play / Slow	 6 Tuner	 Shift + 6
 >>	 >> / Tune+	 Sleep	 Sleep / Timer
 Status	 Exit / Cancel / Clear	 Disp	 Display / Media
 I<<	 I<< / Preset-	 7 Tuner	 Shift + 7
 Pause	 Pause / Step / Freeze	 CH Level	 Shift + CH+ /
 MPX	 Zoom / Size	 8 Tuner	 Shift + 8
 PQLS	 Shift + Menu / Home	 A.ATT.	 Yellow / YouTube / Repeat





 





















 

 



 

 





 





 

 

 

 







	Original	Sustituto		Original	Sustituto
	9 Tuner	+	Shift + 9		
	Dimmer	+	Shift + Mute / Dimmer		
	CH +		CH+ / Page+		
	D.Access	+	Shift + D.Menu / Top Menu		
	0 Tuner	+	Shift + 0		
	Class	+	Shift + Display / Media		
	Enter (Class)	+	Shift + OK		
	CH -		CH- / Page-		





 

















 











 

 



 




 
 



 

 















Original		Sustituto		Original		Sustituto	
	Power Source		Power		1		1
	DVD		Shift + 2		2		2
	Top Menu		D.Menu / Top		3		3
	Up		Up		Audio		Audio / Lang I/II
	Left		Left		4		4
	Enter		Shift + OK		5		5
	Enter		OK		6		6
	Right		Right		7		7
	Down		Down		8		8
	Return		Back / Return		9		9
	<<		<< / Tune-		0		0
	Play		Play / Slow		Menu		Menu / Home
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	>>I		>>I / Preset+				





Original	Sustituto	Original	Sustituto
 Power Source	 Power	 1	 1
 Tuner	 Shift + 6	 2	 2
 Master Volume	 Vol+	 3	 3
 Master Volume	 Vol-	 4	 4
 Mute	 Mute / Dimmer	 5	 5
 Band	 Subtitle / EQ	 6	 6
 Tune+	 >> / Tune+	 Disp	 Display / Media
 Tune+	 Up	 7	 7
 T.Edit	 Text / Goto	 8	 8
 Preset+	 >>  / Preset+	 9	 9
 Preset-	 Left	 D.Access	 D.Menu / Top
 Enter	 OK	 0	 0
 Preset-	  << / Preset-	 Class	 Shift + Display / Media
 Preset+	 Right	 Menu	 Menu / Home
 Tune-	 << / Tune-	 Search	 Red / Netflix / Search
 Tune-	 Down		
 MPX	 Zoom / Size		

