





Original	Sustituto
 Power	 Power
 Tv/Radio	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Subtitle	 Subtitle / EQ
 Text	 Text / Goto
 Hold	 Shift + Stop /
 TVG	 Guide / EPG / -/--
 Audio	 Audio / Lang I/II
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Size	 Zoom / Size
 <<	 << / Tune-
 Subpage	 Eject / Surround
 >>	 >> / Tune+

Original	Sustituto
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 FAV	 Fav / Marker / PC
 >>I/Index	 >>I / Preset+
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Aspect	 Picture / Format
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+





Original	Sustituto	Original	Sustituto
VOL -	Vol-	VOL -	Vol-
DISPLAY	Display	MEDIA DISPLAY	Display / Media
CH -	CH-	CH PAGE -	CH- / Page-
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
-/--	-/--	SHIFT + GUIDE EPG	Shift + Guide / EPG / -/--
0	0	HDMI - BAT 0	0
Recall	Recall	RETURN BACK	Back / Return

Original	Sustituto

