

 
 

 


 



 

 

 




 

 
 



 





 

 
 


 

 

 




 

 

 


 


 
 
 

 


 




Original	Sustituto	Original	Sustituto
On/Off	 Power	Menu Left	 Left
Audio Off	 Mute	OK Enter	 Ok
Slow Down	 Ch -	Progr.	 Sleep
Slow Up	 Ch +	Next	 >>
Pause	 Pause	Menu Right	 Right
Auto/Track	 Smart	Prev.	 <<
Stop	 Stop	Menu Down	 Down
Subt.	 Subt	Volume+	 Vol +
Title	 List	Volume-	 Vol -
Rep/A-B	 TV/R	Top Menu	 D. Menu
Pepeat/1/All	 Text	1	 1
Zoom	 Shift + Eject	2	 2
DVD/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	Store	 Red
Return	 Back	6	 6

 
 
 
 
 




 


 




Original	Sustituto	Original	Sustituto
Digest	 Green	Angle	 Format
7	 7	Np	 Shift + Subt
Open/Close	 Eject	Info	 Shift + Info
8	 8		
9	 9		
Clear/00:00	 Exit		
+10	 Guide		
Record	 Rec		
Auto Scan	 Media		
Rewind	 <<		
Play	 Play		
F.Forward	 >>		
Setup	 Options		
Audio	 Dual		
3D	 3D		
0	 0		
C/CH	 Pre Ch		


 
 


 

 




 



 

 




 


 

 


 




Original	Sustituto	Original	Sustituto
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Stop	 Stop	Return	 Exit
Pause	 Pause	Menu Down	 Down
Slow Up	 Ch +	Progr.	 Back
Slow Down	 Ch -	Volume+	 Vol +
Subt.	 Subt	Top Menu	 D. Menu
Auto/Track	 Sleep	Next	 >>I
Rep/A-B	 TV/R	Volume-	 Vol -
Zoom	 Shift + Eject	1	 1
Title	 List	2	 2
Pepeat/1/All	 Text	3	 3
DVD/TV	 AV	Prev.	 I<<
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Sustituto	Original	Sustituto
8		8	
Video		Smart	
9		9	
+10		Guide	
0		0	
C/CH		Pre Ch	
Rewind		<<	
Random		Media	
Angle		Format	
R/L	 + 	Shift + Info	
Play		Play	
Record		Rec	
F.Forward		>>	
3D		3D	
Open/Close		Eject	
Audio		Dual	



Original	Sustituto	Original	Sustituto
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Back
Slow Up	 Ch +	Menu Down	 Down
Auto/Track	 Smart	Next	 >>
Stop	 Stop	Progr.	 Sleep
Subt.	 Subt	Volume+	 Vol +
Pause	 Pause	Top Menu	 D. Menu
Zoom	 Shift + Eject	Volume-	 Vol -
Title	 List	Prev.	 <<
Rep/A-B	 TV/R	1	 1
Pepeat/1/All	 Text	2	 2
DVD/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Sustituto	
8	8	8
Open/Close	ZOOM	Eject
Mode	APP MEDIA	Media
9	9	9
Setup	SETTINGS OPT	Options
+10	- / - GUIDE	Guide
3D	ECO 3D	3D
0	0	0
C/CH	FAV PRE-CH	Pre Ch
Play/Back	SHIFT +	Shift + Left
Resume	SHIFT +	Shift + Play
Play	PLAY MODE	Play
Karaoke/Step	SHIFT +	Shift + Pause
Np	SHIFT +	Shift + Subt
Record	REC MODE	Rec
F.Forward	>>	>>
Rewind	<<	<<

Original	Sustituto	
Store	SHIFT + Shift + Down	
Angle	PICTURE FORMAT	Format
Lang	SOUND DUAL	Dual

