

 
 




Original	Sustituto
 Power On	 Power
 Mute	 Mute
 TV/Radio	 TV/R
 FAV	 Pre Ch
 TV/DBS	 Smart
 VCR/DBS	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Find	 3D

Original	Sustituto
 Recall	 Back
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK / List	 Ok
 OK / List	 List
 Menu	 Menu
 Exit	 Exit
 PG/UP	 >>
 PG/DW	 <<
 Red / Pause	 Red
 Red / Pause	 Pause





Original	Sustituto
ZOOM Green / Zoom	B Green
ZOOM Green / Zoom	ZOOM Eject
T/TEXT Yellow / T/Text	C Yellow
T/TEXT Yellow / T/Text	REPEAT TEXT Text
TIMER Blue / Timer	D Blue
TIMER Blue / Timer	SHIFT + TIMER AV Shift + AV
EDIT White / Edit	SETTINGS OPT Options
SUB.T Sub.T	AD SUBT Subt
AUDIO Audio	SOUND DUAL Dual
INFO Info	DISPLAY INFO Info
SIGNAL Signal	PROG SLEEP Sleep
F1 F1	SHIFT + 1 Shift + 1
F2 F2	SHIFT + 2 Shift + 2
[-] [-]	E-MANUAL D.MENU D. Menu
EPG EPG	EPG GUIDE Guide
SAT SAT	TIMER AV AV
Format Format	PICTURE FORMAT Format

Original	Sustituto

