 


Original	Sustituto	Original	Sustituto
VHS/DVD Power	Power	Create Chapter	TV/R
Direct TV Rec	Subt	I<< Skip	I<<
VHS/DVD	Smart	Skip >>I	>>I
1	1	REW / << Slow/Search	<<
2	2	FF / Slow/Search	>>
3	3	Stop	Stop
4	4	Pause	Pause
5	5	Play	Play
6	6	Direct Navigator / Top Menu	D. Menu
7	7	Functions	List
8	8	Up	Up
9	9	Left	Left
0	0	Enter	Ok
Cancel / Reset	Exit	Right	Right
Input Select	Guide	Down	Down
CH+ / Tracking/V-Lock+	Ch +	Sub Menu	Menu
CH- / Tracking/V-Lock-	Ch -	Return	Back

 
Original	Sustituto	Original	Sustituto
Create Chapter	TV/R	I<< Skip	I<<
Skip >>I	>>I	REW / << Slow/Search	<<
FF / Slow/Search	>>	Stop	Stop
Pause	Pause	Play	Play
Direct Navigator / Top Menu	D. Menu	Functions	List
Up	Up	Left	Left
Enter	Ok	Right	Right
Down	Down	Sub Menu	Menu
Return	Back		

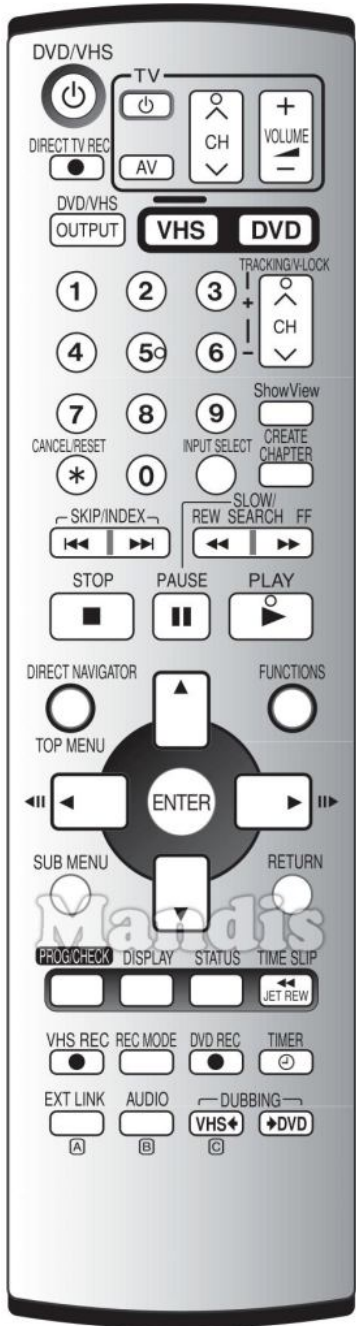




Original	Sustituto	Original	Sustituto
Prog / Check	Sleep		
Display	Info		
Status	Media		
Time Slip	Vol +		
Timer	AV		
Ext Link	3D		
Audio / B	Dual		
Dubbing	Blue		



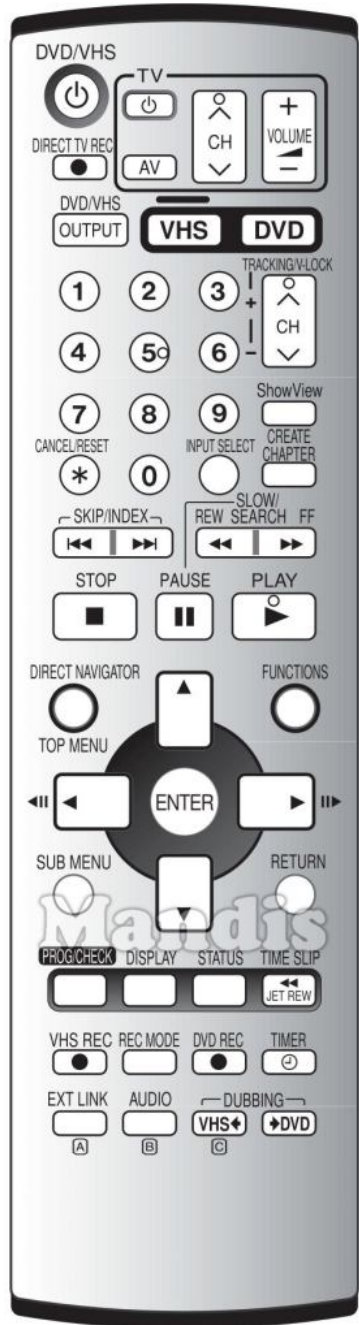 





 
 

 


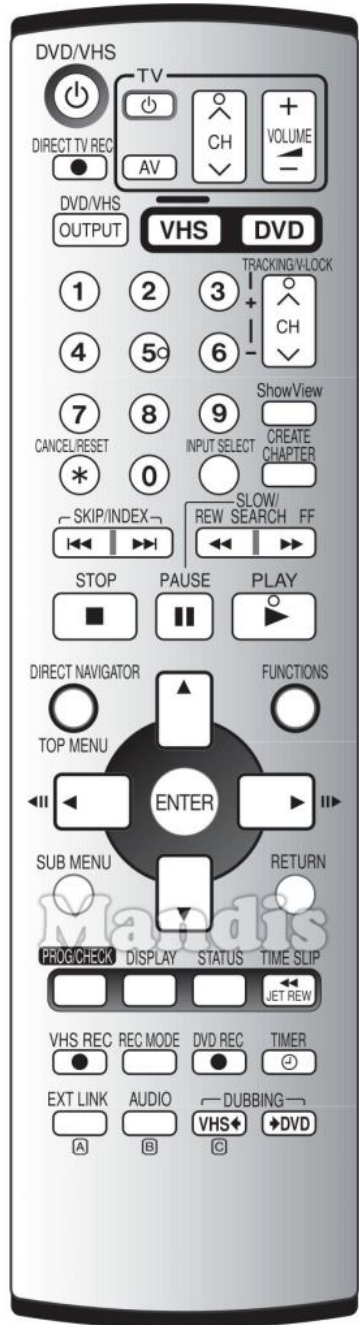







 
 
 

 
 



 

 

 



 

 

 

 





 



 

 



 



 










	Original	Sustituto	Original	Sustituto
	Power			
	AV			
	Volume+			
	Volume-			
	CH+			
	CH-			





Original	Sustituto	Original	Sustituto
 VHS/DVD Power	 Power	 ShowView	 Media
 Direct TV Rec	 Subt	 I<< Index	 I<<
 VHS/DVD	 Smart	 Index >>I	 >>I
 1	 1	 REW	 <<
 2	 2	 FF	 >>
 3	 3	 Stop	 Stop
 4	 4	 Pause	 Pause
 5	 5	 Play	 Play
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 Enter	 Ok
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 Cancel / Reset	 Exit	 Return	 Back
 Input Select	 AV	 Prog/Check	 Sleep
 CH+ / Tracking/V-Lock+	 Ch +	 Display	 Info
 CH- / Tracking/V-Lock-	 Ch -	 Jet Rew	 Shift + <<

Original	Sustituto	Original	Sustituto
 VHS/DVD Power	 Power	 ShowView	 Media
 Direct TV Rec	 Subt	 I<< Index	 I<<
 VHS/DVD	 Smart	 Index >>I	 >>I
 1	 1	 REW	 <<
 2	 2	 FF	 >>
 3	 3	 Stop	 Stop
 4	 4	 Pause	 Pause
 5	 5	 Play	 Play
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 Enter	 Ok
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 Cancel / Reset	 Exit	 Return	 Back
 Input Select	 AV	 Prog/Check	 Sleep
 CH+ / Tracking/V-Lock+	 Ch +	 Display	 Info
 CH- / Tracking/V-Lock-	 Ch -	 Jet Rew	 Shift + <<



