



 
 



 



 










 
 



 




 




 
 





 
 

 
 
 

 

 

 


 











Original	Sustituto	Original	Sustituto
 Power	 Power	 Menu	 Menu
 Open / Close	 Eject	 Setup	 Options
 VCR	 Media	 Up / PR+	 Up
 DVD	 Smart	 Up / PR+	 Ch +
 Input	 AV	 Down / PR-	 Down
 1 / Tracking -	 1	 Down / PR-	 Ch -
 2	 2	 Right	 Right
 3 / Tracking +	 3	 Left	 Left
 4	 4	 Enter	 Ok
 5	 5	 Timer	 Shift + AV
 6	 6	 Display	 Info
 7	 7	 Rec	 Rec
 8	 8	 Rec Mode	 Shift + Rec
 9	 9	 Subtitle	 Subt
 0	 0	 Audio	 Dual
 TV / VCR	 TV/R	 << REW	 <<
 Clear	 Exit	 Play/Pause	 Pause





Original	Sustituto
 Play/Pause	 Play
 FF >>	 >>
 I<< Prev	 I<<
 Stop	 Stop
 Next >>I	 >>I
 Skip	 Back
 Title	 List
 Slow -	 Vol -
 Slow +	 Vol +
 Repeat	 Text
 A-B	 Shift + Text
 Zoom	 Shift + Eject
 Angle	 Format

Original	Sustituto

