

 

 



 



Original	Sustituto
Power	Power
Mute	Mute
TV/AUX	Smart
Aspect	Format
TV	Media
Recall	Back
Radio	TV/R
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Original	Sustituto
Text	Text
FAV	Pre Ch
P-	Ch -
P+	Ch +
Info	Info
Up	Up
Left	Left
OK	Ok
OK	Shift + Ok
Right	Right
Down	Down
Menu	Menu
Exit	Exit
Red / Lang	Red
Red / Lang	Dual
Green / Pause	Green
Green / Pause	Pause





Original		Sustituto		Original		Sustituto	
	Yellow / Sound		Yellow				
	Yellow / Sound	 + 	Shift + Dual				
	Blue / EPG		Blue				
	Blue / EPG		Guide				

