


 






 





 















 



 









| Original | Sustituto |
|---|-----------|
|  | Power |
|  | Input |
|  | 1 |
|  | 2 |
|  | 3 |
|  | 4 |
|  | 5 |
|  | 6 |
|  | 7 |
|  | 8 |
|  | 9 |
|  | Disp |
|  | 0 |
|  | Recall |
|  | Vol+ |
|  | Mute |
|  | CH+ |

| Original | Sustituto |
|---|------------------|
|  | Power |
|  | AV / Input / RDS |
|  | 1 |
|  | 2 |
|  | 3 |
|  | 4 |
|  | 5 |
|  | 6 |
|  | 7 |
|  | 8 |
|  | 9 |
|  | Display / Media |
|  | 0 |
|  | Back / Return |
|  | Vol+ |
|  | Mute / Dimmer |
|  | CH+ / Page+ |

| Original | Sustituto |
|---|-------------|
|  | Vol- |
|  | Mouse |
|  | CH- / Page- |
|  | P.Mode |
|  | Home |
|  | S.Mode |
|  | Menu |
|  | Up |
|  | Exit |
|  | Left |
|  | Enter |
|  | Right |
|  | Netflix |
|  | Down |
|  | YouTube |
|  | Red |
|  | Green |

| Original | Sustituto |
|---|----------------------------|
|  | Vol- |
|  | Smart / List |
|  | CH- / Page- |
|  | Picture / Format |
|  | Shift + Menu / |
|  | Sound / Title |
|  | Menu / Home |
|  | Up |
|  | Exit / Cancel / Clear |
|  | Left |
|  | OK |
|  | Right |
|  | Shift + Red / Netflix / |
|  | Down |
|  | Shift + Yellow / YouTube / |
|  | Red / Netflix / Search |
|  | Green / APP / Repeat |



