 





 
 










 











Original	Sustituto	Original	Sustituto
 Power	 Power	 Program	 Sleep
 Set Up	 Options	 Repeat	 Shift + Text
 Open/Close	 Eject	 Picture Memory	 Format
 1	 1	 Tv/DVD	 TV/R
 2	 2	 Audio	 Dual
 3	 3	 Angle	 Red
 4	 4	 Subtitle	 Subt
 5	 5	 Book Mark	 Green
 6	 6	 I<<	 I<<
 7	 7	 >>I	 >>I
 8	 8	 << Search	 <<
 9	 9	 Search >>	 >>
 0	 0	 AV Vol+	 Vol +
 Clear	 Exit	 AV Vol-	 Vol -
 Input	 AV	 Play	 Play
 Time/Text	 Text	 Pause	 Pause
 Shuffle	 Media	 Stop	 Stop





	Original	Sustituto	
	Display		Info
	Title		Guide
	DVD Menu		D. Menu
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Wheel →		Ch +
	← Wheel		Ch -
	Wheel JOG →		Shift + Ch +
	← Wheel JOG		Shift + Ch -

	Original	Sustituto





Original	Sustituto
Power	Power
Vol+	Vol +
Vol-	Vol -
Prog+	Ch +
Prog-	Ch -
Tv/Video	TV/R
Wide Mode	3D
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Original	Sustituto
CLEAR	GUIDE
TV	
DVD	
SAT	
AUX	
PLAY MODE	
REC MODE	

