

 

 




 
 


 
 









 
 


 
 
 

 



 
 


 
 


 
 



 
 
 
 
 


 
 














Original	Sustituto	Original	Sustituto
 Power	 Power	 Stop / Reveal	 Stop
 Mute	 Mute	 << / Hold	 <<
 Red	 Red	 >> / Subpage	 >>
 Green	 Green	 I<< / Size	 I<<
 Yellow	 Yellow	 >>I / Cancel	 >>I
 Blue	 Blue	 Info	 Info
 EPG	 Guide	 Input	 AV
 Rec	 D. Menu	 Up	 Up
 Rec. List	 Eject	 Left	 Left
 T-Shift	 3D	 OK	 Ok
 Sub-T	 Subt	 Right	 Right
 Audio	 Dual	 Down	 Down
 Sleep	 Sleep	 Menu	 Menu
 TV/Radio	 TV/R	 Exit	 Exit
 Text	 Text	 Vol+	 Vol +
 Play / Index	 Play	 Vol-	 Vol -
 Pause / Mix	 Pause	 P-Mode	 Format





	Original	Sustituto	
	S-Mode		List
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--	+	Shift + Guide
	0		0
	Recall		Back
	Fav		Pre Ch
	Fav+		Smart

	Original	Sustituto
	Fav-	

