





















| Original | Sustituto |
|--|--|
|  Standby |  Power |
|  Mute |  Mute |
|  Up |  Up |
|  Left |  Left |
|  OK |  Ok |
|  Right |  Right |
|  Down |  Down |
|  Menu |  Menu |
|  Exit |  Exit |
|  Red / UHF |  Red |
|  Green / Audio |  Green |
|  Green / Audio |  Dual |
|  Yellow / Pause |  Yellow |
|  Yellow / Pause |  Pause |
|  Blue / Recall |  Blue |
|  Blue / Recall |  Back |
|  1 |  1 |

| Original | Sustituto |
|---|---|
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  EPG |  Guide |
|  Group |  Pre Ch |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  CH+ |  Ch + |
|  CH- |  Ch - |
|  Page+ |  >> |
|  Page- |  << |



