



Original	Sustituto	Original	Sustituto
Power Audio	Power	0	0
Function	Smart / List	Subtitle	Subtitle / EQ
Input	AV / Input / RDS	Prog / Memo	Fav / Marker / PC
Sleep / Dimmer	Sleep / Timer	Repeat	Green / APP / Repeat
Sleep / Dimmer	Shift + Mute / Dimmer	Clear	Exit / Cancel / Clear
Return	Back / Return	Top Menu	D.Menu / Top
1	1	Up / Preset+	Up
2	2	Up / Preset+	Shift + >>1 / Preset+
3	3	Menu	Menu / Home
Surround	Eject / Surround	Left / Tuning-	Left
4	4	Left / Tuning-	Shift + << /
5	5	Enter	OK
6	6	Right / Tuning+	Right
Scan Mode	TV/Radio /	Right / Tuning+	Shift + >> /
7	7	Set Up	Setup / OPT /
8	8	Down / Preset-	Down
9	9	Down / Preset-	Shift + I<< / Preset-





Original	Sustituto	Original	Sustituto
 Display	 Display / Media		
 Stop	 Stop / Hold		
 Play / FM Mode	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Volume+	 Vol+		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 Muting	 Mute / Dimmer		
 << / Slow-	 << / Tune-		
 >> / Slow+	 >> / Tune+		
 Volume-	 Vol-		

