



Original	Sustituto
Power	Power
CBL/SAT	1
DVD	2
Blu-ray	5
Game	4
Media Player	0
CD	3
Phono	7
Tv/Audio	Guide / EPG / -/--
Tuner	6
USB	8
Bluetooth	9
Internet Radio	Fav / Marker / PC
.: .:	Smart / List
CH/Page+	CH+ / Page+
CH/Page-	CH- / Page-
Eco	Display / Media

Original	Sustituto
Volume+	Vol+
Volume-	Vol-
Mute	Mute / Dimmer
Info	Info / Angle
Option	Shift + Setup / OPT / Tools
Back	Back / Return
Setup	Setup / OPT /
Up	Up
Down	Down
Right	Right
Left	Left
Enter	OK
Play	Play / Slow
I<</Tune-	I<< / Preset-
Pause	Pause / Step / Freeze
>>I/Tune+	>>I / Preset+
<</Band	<< / Tune-





Original	Sustituto
Power	Power
CBL/SAT	1
DVD	2
Blu-ray	5
Game	4
CD	3
Media Player	0
Phono	7
Tv/Audio	Guide / EPG / -/--
Tuner	6
USB	8
Bluetooth	9
Internet Radio	Fav / Marker / PC
.: .:	Smart / List
CH/Page+	CH+ / Page+
CH/Page-	CH- / Page-
Volume+	Vol+

Original	Sustituto
Volume-	Vol-
Mute	Mute / Dimmer
Back	Back / Return
Up	Up
Down	Down
Right	Right
Left	Left
Enter	OK
Play	Play / Slow
I<</Tune-	I<< / Preset-
Pause	Pause / Step / Freeze
>>I/Tune+	>>I / Preset+
<</Band	<< / Tune-
Stop/Mode	Stop / Hold
>>/Memory	>> / Tune+
Quick Select 1	Red / Netflix / Search
Quick Select 2	Green / APP / Repeat



