

 



 



 









 







 



 

 









 



















 







Original		Sustituto		Original		Sustituto	
	Power DVD		Power		Cancel		Exit / Cancel / Clear
	Stop		Stop / Hold		Zoom		Zoom / Size
	Pause		Pause / Step / Freeze		Subtitle		Subtitle / EQ
	Play		Play / Slow		Angle		Info / Angle
	<<		<< / Tune-		3D Phonic		Audio / Lang I/II
	>>		>> / Tune+		Strobe		AV / Input / RDS
	l<<		l<< / Preset-		Digest		Picture / Format
	>>l		>>l / Preset+		1		1
	Menu		Menu / Home		2		2
	Return		Back / Return		3		3
	On Screen		Display / Media		4		4
	Theater Position		Smart / List		5		5
	Enter		OK		6		6
	Up		Up		7		7
	Down		Down		8		8
	Right		Right		9		9
	Left		Left		0		0





Original	Sustituto
10	Guide / EPG / -/--
+10	Fav / Marker / PC
Open/Close	Eject / Surround
Resume	Text / Goto
Power Tv	Shift + Power
Tv/Video	TV/Radio /
Tv CH+	CH+ / Page+
Tv CH-	CH- / Page-
Tv Vol+	Vol+
Tv Vol-	Vol-
Enter Tv	Shift + OK
1 Tv	Shift + 1
2 Tv	Shift + 2
3 Tv	Shift + 3
4 Tv	Shift + 4
5 Tv	Shift + 5
6 Tv	Shift + 6

Original	Sustituto
7 Tv	Shift + 7
8 Tv	Shift + 8
9 Tv	Shift + 9
0 Tv	Shift + 0
10 Tv	Shift + Guide / EPG / -/--

